



Panel Blind
Assembly Instructions

One Way Corded Panel Blind

Use the enclosed panel size guide chart to match the number of panels/panel sizes to the required blind width (figures in bold are the most suitable panel sizes for corresponding blind width).

Allowances

Recess size: Deduct 10mm on width, 20mm on drop

Blind size: No deductions required

Channel size: Less 30mm (end caps)

Panel width size calculation with 50mm overlap: blind size width + number of overlaps x 50mm (overlaps always one less than the number of panels). This total is then divided by the full number of panels to give you your panel width.

PVC Panel Runner

The Velcro facing you with the wheels at the top determines the face of the PVC panel.

Each PVC panel runner has a 15mm cut out along the top at the back edge. The front panel runner only has a 28mm cut out at the leading edge and two 4.2mm holes 25mm apart for cords to fit through, approx 50mm along the leading edge.

Runner Wheels

Each panel has at least two plastic runner wheels attached to them.

T Shape Stop

Slide on the plastic T shape stops and attach with a screw to the front edge of each panel.

L Shape Stop

Slide an L shaped stop onto each panel, 50mm in from the trailing edge. No stop is required on the back panel.

Screw Stop

The back panel is fixed into its position by a screw stop that is fitted in the slot of the channel.

Assembly

Feed one screw stop and one panel runner to the back slot of the channel. Feed on the other panels leaving the front two panels off.

Panel Blinds

In the interests of public safety it is advisable that one of the following public safety components is used when fitting a panel blind.

Wand Operated

Panel blinds can be traversed using a wand.

Cord & Chain Tidy

The cord and/or chain can be secured within the tidy and retained tight against the wall.

Cord & Chain Cleat

The cord and chain cleat is fixed to the side of the window recess and allows the cord or chain to be neatly wrapped around it, safely out of the reach of children.

Please use a **Child Safety Warning Tag** and attach to every finished blind.

Panel Size Guide (cont.)

One Way Draw

Blinds	3 Panel	4 Panel	5 Panel
Width	3 Channel	4 Channel	5 Channel
3500	1200	913	740
3550	1217	925	750
3600	1233	938	760
3650	1250	950	770
3700	1267	963	780
3750	1283	975	790
3800	1300	988	800
3850	1317	1000	810
3900	1333	1013	820
3950	1350	1025	830
4000	1367	1038	840
4050	1383	1050	850
4100	1400	1063	860
4150	1417	1075	870
4200	1433	1088	880
4250	1450	1100	890
4300	1467	1113	900
4350	1483	1125	910
4400	1500	1138	920
4450	1517	1150	930
4500	1533	1163	940
4550	1550	1175	950
4600	1567	1188	960
4650	1583	1200	970
4700	1600	1213	980
4750	1617	1225	990
4800	1633	1238	1000
4850	1650	1250	1010
4900	1667	1263	1020
5000	1700	1288	1040
5050	1717	1300	1050
5100	1733	1313	1060
5150	1750	1325	1070
5200	1767	1338	1080
5250	1783	1350	1090
5300	1800	1363	1100
5350	1817	1375	1110
5400	1833	1388	1120
5450	1850	1400	1130
5500	1867	1413	1140
5550	1883	1425	1150
5600	1900	1438	1160
5650	1917	1450	1170
5700	1933	1463	1180
5750	1950	1475	1190
5800	1967	1488	1200
5850	1983	1500	1210
5900	2000	1513	1220
6000	2033	1538	1240

Split Draw

Wand Only

4 Panel	6 Panel	8 Panel
3 Channel	4 Channel	5 Channel
913	625	481
925	633	488
938	642	494
950	650	500
963	658	506
975	667	513
988	675	519
1000	683	525
1013	692	531
1025	700	538
1038	708	544
1050	717	550
1063	725	556
1075	733	563
1088	742	569
1100	750	575
1113	758	581
1125	767	588
1138	775	594
1150	783	600
1163	792	606
1175	800	613
1188	808	619
1200	817	625
1213	825	631
1225	833	638
1238	842	644
1250	850	650
1263	858	656
1288	875	669
1300	883	675
1313	892	681
1325	900	688
1338	908	694
1350	917	700
1363	925	706
1375	933	713
1388	942	719
1400	950	725
1413	958	731
1425	967	738
1438	975	744
1450	983	750
1463	992	756
1475	1000	763
1488	1008	769
1500	1017	775
1513	1025	781
1538	1042	794

Cut your cord 2 x width and 2 x your suggested drop. Feed cord ends through the two 4.2 mm holes and form the cord into a mushroom shape on the Velcro side. Place the cord around the first and second grooves in the headrail for it to locate, then feed the leading panel runner into the headrail, feed the second panel into the headrail.

Feed the cords around the slot of the end cap at the idle end, through the control end and then down through the slot to create the drop. Put the rubber dampers on the end of the end caps and tighten on to the headrail with the screws provided.

Pull the back panel to the end and fix into position with the screw stop.

Panels

Allowances: 20 mm for the headrail and 20mm from the recess - so the panel length is 40mm shorter than the recess drop. Cut your fabric to the required panel width and 100mm longer than the drop. Form into the bottom bar, turn the fabric round and cut off at the top to the size required. Sew your Velcro (loop) to the top of the fabric.

If you are using woven wood as your fabric, attach the bottom bar by either gluing/pinning and then turn the fabric round. Cut to length making sure that the ladder strings are sealed by the glue. Sew your Velcro (loop) to the top of the fabric.

Split Draw Panel Blind

Allowances are exactly the same as one-way draw blinds. The Panel calculation is the same.

PVC Panel Runner

Always have an even number of panels; 3 slot channel is 4 panels, 4 slot channel is 6 panels, 5 slot channel is 8 panels.

A 3 slot channel can be made with a wand only

With a 4 slot channel the headrail has to be reversed, so that the cord slots are at the front of the rail.

Each panel has a 15mm cut out along the top at the back edge. Two panels have 2 x 4.2 mm holes 25mm apart, approx 50mm in from leading edge (one each side, handed like a pair).

Runner Wheels

Each panel has at least two plastic runner wheels attached to them.

T Shaped Stop

Slide on the leading edge of all the panel runners and attach by the screw, the leading two runners have to be cut away to allow them pass each other and overlap.

L Shape Stops

Slide L shaped stops onto each panel, 50mm in from the trailing edge. No stops are required on the back panels.

Screw Stops

Both back panels are fixed into position with the screw stop that is fixed in the slot of the channel.

Assembly

With a split draw blind, your plastic runners are loaded from the back on one side and from the front on the other. This will leave just one panel on the front slot and one panel on the back slot.

Cut your cord 2 x width and 2 x your suggested drop. Feed the cord through one of the 4.2 mm holes in the leading panel and form the cord into a mushroom shape on the Velcro side. With the other end of the cord, feed it in and out of the two holes on the other leading panel, with the loop being on the Velcro side, and then back through the hole in the first leading panel. Form a mushroom shape so it cannot be pulled out.

Place the cord around the first and second grooves in the headrail for it to locate, then feed the leading panel's runner into the headrail. Feed the rest of the panels into the headrail.

Feed the cords around the slot of the end cap at the idle end, through the control end and down through the slot to create the drop. Put the rubber dampers on the end of the end caps and tighten on to the headrail with the screws provided. Pull back the end panels and fix into position using the screw stops.

Blinds with Wands

The allowance for the end caps is 4mm (not 30mm as for corded blinds). blinds with wands are made as above, but the 4.2mm holes and cord are not required. The wand is attached by clipping it to the leading panel via a drilled hole in the T stop.

Panel Size Guide (mm)

One Way Draw

Blinds	3 Panel	4 Panel	5 Panel
Width	3 Channel	4 Channel	5 Channel
1000	367	288	240
1050	383	300	250
1100	400	313	260
1150	417	325	270
1200	433	338	280
1250	450	350	290
1300	467	363	300
1350	483	375	310
1400	500	388	320
1450	517	400	330
1500	533	413	340
1550	550	425	350
1600	567	438	360
1650	583	450	370
1700	600	463	380
1750	617	475	390
1800	633	488	400
1850	650	500	410
1900	667	513	420
1950	683	525	430
2000	700	538	440
2050	717	550	450
2100	733	563	460
2150	750	575	470
2200	767	588	480
2250	783	600	490
2300	800	613	500
2350	817	625	510
2400	833	638	520
2450	850	650	530
2500	867	663	540
2550	883	675	550
2600	900	688	560
2650	917	700	570
2700	933	713	580
2750	950	725	590
2800	967	738	600
2850	983	750	610
2900	1000	763	620
2950	1017	775	630
3000	1033	788	640
3050	1050	800	650
3100	1067	813	660
3150	1083	825	670
3200	1100	838	680
3250	1117	850	690
3300	1133	863	700
3350	1150	875	710
3400	1167	888	720

Split Draw

Wand Only

4 Panel	6 Panel	8 Panel
3 Channel	4 Channel	5 Channel
288	208	169
300	217	175
313	225	181
325	233	188
338	242	194
350	250	200
363	258	206
375	267	213
388	275	219
400	283	225
413	292	231
425	300	238
438	308	244
450	317	250
463	325	256
475	333	263
488	342	269
500	350	275
513	358	281
525	367	288
538	375	294
550	383	300
563	392	306
575	400	313
588	408	319
600	417	325
613	425	331
625	433	338
638	442	344
650	450	350
663	458	356
675	467	363
688	475	369
700	483	375
713	492	381
725	500	388
738	508	394
750	517	400
763	525	406
775	533	413
788	542	419
800	550	425
813	558	431
825	567	438
838	575	444
850	583	450
863	592	456
875	600	463
888	608	469